# MANUFACTURING, INC.



©2019 Con-Tech Manufacturing, Inc.

phone 507-374-2239



# **Screen**

- 7" LCD color screen
- Adjustable Ram Arm dash mounted display
- Chute lock, Chute hazard, Hopper up warning notifications
- HYD Fan cooling icon with built-in On/Off Override button integrated on screen
- Tachometer indicator for drum RPM
- Hydraulic temperature display gauge

- Hydraulic pressure display gauge
- Resettable and lifetime drum counter
- Built-in rear view camera
- Drum RPM and direction
- Digital hydraulic temp
- HYD fan & override button
- Digital hydraulic pressure
- Back-up safety camera integrated on screen
- Auto Mix Count
- Auto Mix Reset

## Joystick

- Superior ergonomic design
- Unlimited positions for driver comfort
- Flexible Joystick controller for all primary job site functions
- Very comfortable feel
- All buttons are locked out in transit except Drum S/S so operator cannot accidentally activate any functions
- Coated flexible rod arm with long life expectancy

# In Transit Safety Triggers

- No Discharge
- Hopper Down
- Air Chute Locked
- Chute Up/Down
- Drum Saver/Constant Speed
- Load protection (If drum is in discharge position while in transit the Elite Control System™ will correct and place drum into the charge position automatically, saving lost loads and clean up)

\*In-transit triggers can be programmed to customers specifications within manufacturers programmable range. Constant speed RPM can also be preset from 1-3 RPM.

\* All buttons are locked out in transit except Drum S/S

# **Auto Mix Function**

The Auto Mix function will raise the vehicle engine RPM in a charge position until a preset drum revolution is achieved. After the Auto Mix action is complete the controls will go into a constant speed (Drum Saver feature) in the charge position. Auto Mix Range (60-150 Revs)

BRIDGEKING UP

Hold button for 1 second to raise axle

BRIDGEKING STOP

Stops axle movement in any direction

AUTO MIX

Auto mix range 60-150 revolutions

WORK LIGHTS

On/Off\*

CHUTE VIBRATOR

On/Off

MENU

Settings



BRIDGEKING DOWN Hold button for 1 second to lower axle

Dn-Ti

CHUTE UP

OCKIUNE CHITEDOWN

DRUMS

#### PUSHER UP/DOWN

Pusher will automatically come up in reverse

CONSTANT SPEED

Drum saver/constant speed adjustable from 1-3 rpm

STROBE LIGHTS

On/Off\*

### ADD WATER

Adds Water To Drum

CAMERA

Rear view camera\*

\*Work lights, strobe lights, and camera will come on automatically in reverse.



## utomatic Triggers in Reverse

- Work lights on (Press button to turn off)
- Strobe lights on (Press button to turn off)
- Rear View Camera On (Press button to turn off)
- BridgeKing<sup>®</sup> Axle Up
- Pusher Axle Up
- Hopper Down



## Indicator Lights

- Transmitter & Receiver
  Paired Indicator
- Charging Indicator
- Transmitter & Receiver Paired
- Battery Dead

## Con-Tech Headguarters

65740 State Hwy 56 Dodge Center, MN 55927 *fax* 507-374-1094

507-374-2239

#### T**exas** (Dallas)

5843 Curtis Dr. Suite 500 Allen, TX 75002 fax 972-941-8911 **972-941-8592** 

## Texas

(Houston) 11175 Windfern Rd. 1 Suite B Houston, TX 77064 fax 832-688-8105 832-688-8449

#### **Georgia** (Atlanta)

[Atlanta] 104 Hudson Industrial Dr. Griffin, GA 30224 fax 770-227-3021 770-229-1773 **Colorado** (**Denver**) 7279 E 96th Ave. Suite E Henderson, CO 80640 **507-418-0260** 

## **Ohio** (Cleveland)

(Lieveidinu) 38134 Western Pkwy Unit #2 Willoughby, OH 44094 440-946-3322

# California

(**San Bernardino**) 1570 E Victoria Ave. San Bernardino, CA 92408 *fax* 909-478-0018

909-478-00117